IBERITAL

FILLING UP WHILE THE COFFEE IS BREWING

MODELS

IB7 (only for IB CONNECT models)
INTENZ (only for IB CONNECT models)
NEW IBERITAL (for models with and without IB CONNECT)
TANDEM (for models with and without IB CONNECT)

Document revision:

Revision:	Version:	Comments:
2	2020-01-31	

ACTIVATING BOILER REFILL WHILE IN OPERATION

To maintain a constant pressure while dispensing coffee, Iberital coffee machines are set, by default, to refill the boiler with water once the groups have finished serving coffee. The water is only able to be refilled when there are NO groups in operation.

In establishments with high peak workloads, there could be long periods of time when a group is in operation. So, as a result of the demand for steam or hot water for infusions, a situation could occur in which the boiler water level goes down so much that when the water is able to be refilled, the maximum time specified for refilling is exceeded. Which, for normal machine operation, is less than the time specified for the machine when it starts up.

Once the refill time has been exceeded without having covered the maximum level probe, the machine will display the message "FillingUp time exceeded" and it will cut off.

If this situation occurs with your machine, it is recommended that the "FillingUp+coffee" function be activated so that the water will always be refilled whenever it is below the level probe, even if the groups are in use.

1. PROCEDURE

1.1. Activating the refill function using the Keypad

Turn off the machine using the main switch.

Press and hold the button for 2 short coffees from group no.1 (left) and turn on the machine using the main switch.


Iberital IB7* (IB Connect)




Iberital Intenz* (IB Connect)



Iberital Tandem

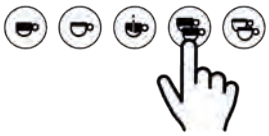


New Iberital / Expression Pro

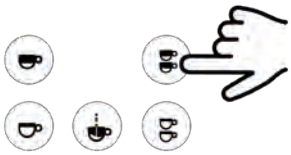

*** Only for IB Connect models.**

Once the machine is on, keep the button pressed down for several seconds.
If it has been done correctly, the pressed button will stay lit.

Iberital IB7* (IB Connect)

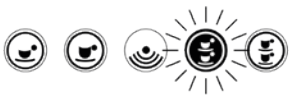


Iberital Intenz* (IB Connect)



Iberital Tandem



New Iberital / Expression Pro

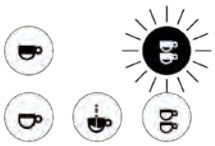

*** Only for IB Connect models.**

Also, on machines that have a display, the following message will appear on the display.



The machine will have to be turned off and on again for the changes to be applied.

1.2. Deactivating the refill function using the Keypad

Turn off the machine using the main switch.

Press and hold the button for 2 long coffees from group no.1 (left) and turn on the machine using the main switch.

Iberital IB7* (IB Connect)




Iberital Intenz * (IB Connect)



Iberital Tandem



New Iberital / Expression Pro

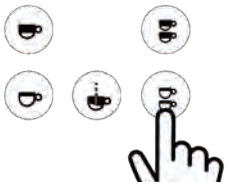


*** Only for models with module IB Connect.**

Once the machine is on, keep the button pressed down for several seconds.
If it has been done correctly, the pressed button will stay lit.

Iberital IB7* (IB Connect)




Iberital Intenz* (IB Connect)

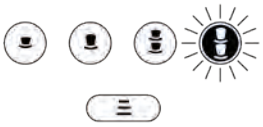

Iberital Tandem



New Iberital / Expression Pro

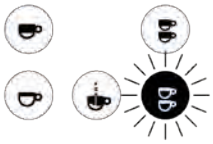

*** Only for models with module IB Connect.**


Also, on machines that have a display, the following message will appear on the display.




The machine will have to be turned off and on again for the changes to be applied.

1.3. Activating/deactivating the refill function using the non-touch display (New Iberital)


1. Set the display to OFF using the I/O (ON/OFF) button.

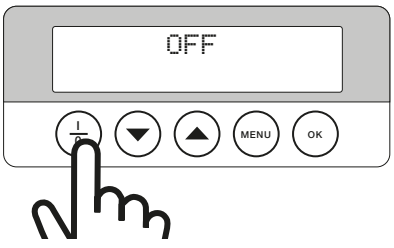


2. Access the technical MENU by pressing the MENU button for 10 or 15 seconds.

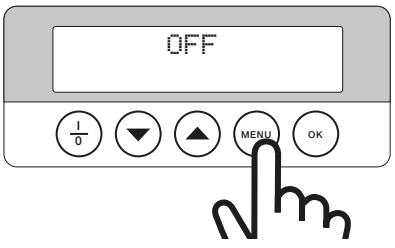

3. The first option that appears in the technical MENU is language.

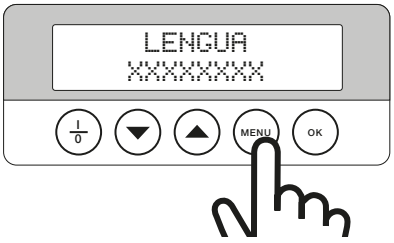



4. Press the MENU button until the next option is displayed.

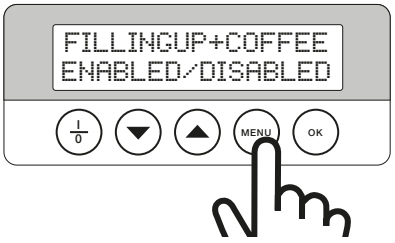


To "Enable" or "Disable" the FillingUp+Coffee option, use the UP ▲ or DOWN ▼ buttons..

5. To finish and exit the Technical MENU, press the I/O (ON/OFF) button.

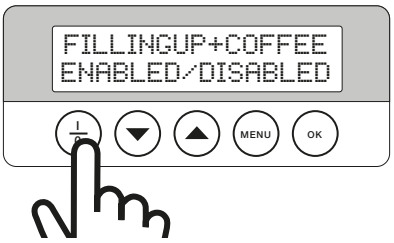

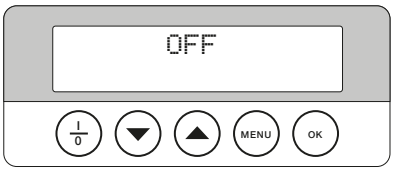

6. To start up the machine, press the I/O (ON/ OFF) button.

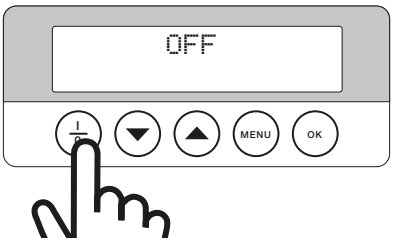

7. The display will show the normal operations screen.

